2.Exploded Views and Parts List

2-1 Cassette Deck :ADR268FTW(OPTION)

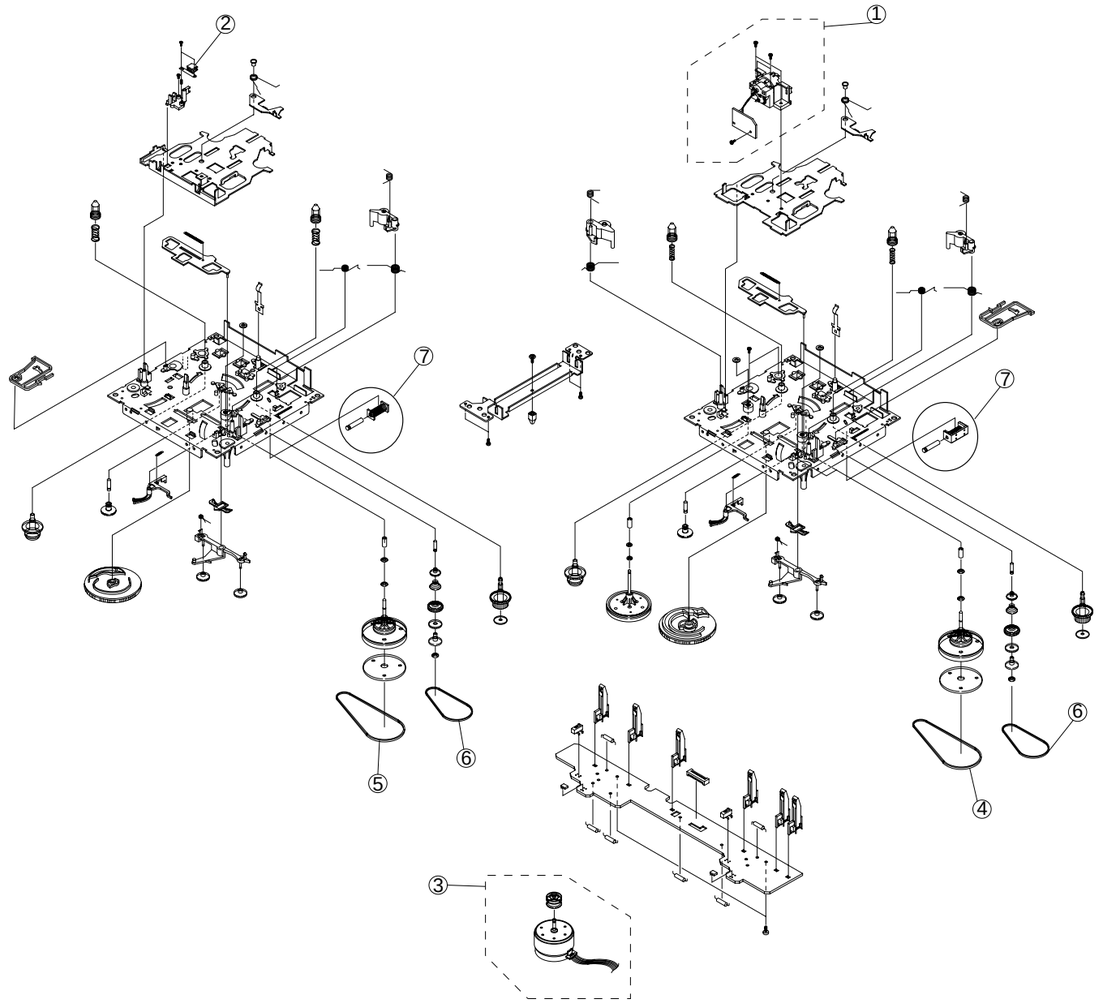

No.	Code No.	Description	Specification	Remarks
	AH59-01145A	DECK-CASSETTE	ADR268FTW	
1	AH81-00368A	ASS.Y RP HEAD	ADR2400-RP(SANKYO)	MT91-11010T
2	AH81-00141B	HEAD PB	MK10P-SS2N3	MT59-00041V
3	AH81-00363A	ASS,Y MOTOR	ADR2400-SHU2L	MT91-15012J
4	AH81-00364A	BELT MAIN1	ADR2400-MAIN 0.5	6602-001056
5	AH81-00365A	BELT MAIN2	ADR2400-MAIN 1.25	6602-001010
6	AH81-00101A	BELT SUB	ADR2400-FR	6602-001055
7	AH81-00102A	SOLENOID	ADR2400-1(20Ω)	MT75-00049A

MAX-ZS750/ZS730/WS750/WS730

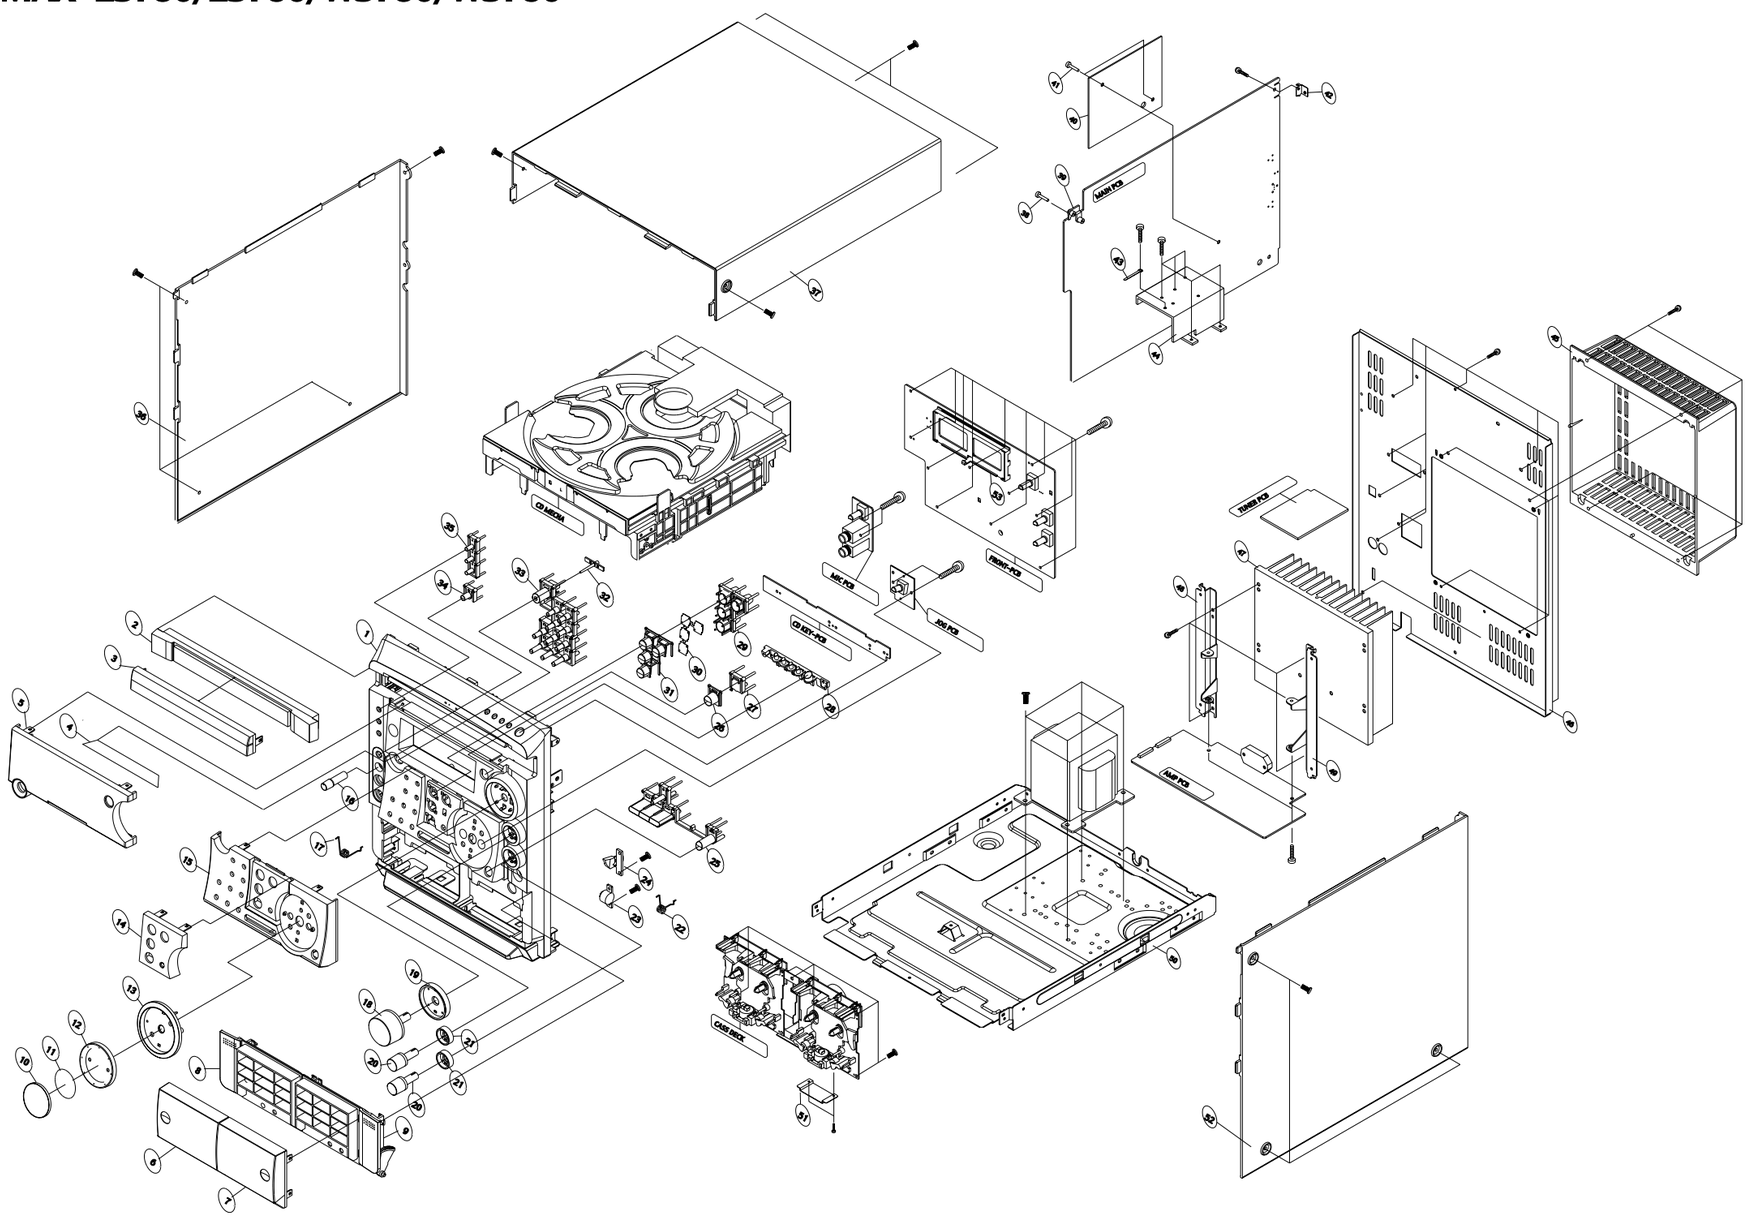

*** Parts List of Total Exploded view**

No.	Code No.	Description	Specification	Q'ty	REMARK
1	AH64-02214M	CABINET-FRONT	MIPS L/GRAY	1	2MIC(silver)
	AH64-02214N		MIPS L/GRAY	1	2MIC(latin sound silver)
	AH64-02214P		MIPS L/GRAY	1	NO MIC(silver)
	AH64-02214Q		MIPS L/GRAY	1	2MIC(gray)
	AH64-02214R		MIPS L/GRAY	1	2MIC(latin sound gray)
	AH64-02214S		MIPS L/GRAY	1	NO MIC(gray)
	AH64-02214T		MIPS L/GRAY	1	NO MIC,NO RDS(gray)
	AH64-02214U		MIPS L/GRAY	1	NO MIC,NO RDS(silver)
2	AH64-02216C	DOOR-CD	ABS L/GRAY	1	silver
	AH64-02216B		ABS L/GRAY	1	gray
3	AH64-02219E	DECO-DOOR CD	ABS L/GRAY	1	ZS750G
	AH64-02214P		ABS L/GRAY	1	ZS730G
	AH64-02214F		ABS L/GRAY	1	WS730(silver)
	AH64-02214M		ABS L/GRAY	1	MQ-WS730S
	AH64-02214N		ABS L/GRAY	1	WS730
	AH64-02214S		ABS L/GRAY	1	WS750
	AH64-02214T		ABS L/GRAY	1	WS750S
4	AH63-00501A	SHEEFT-VFD	PC 0.4T	1	
5	AH64-02225B	WINDOW-VFD	PMMA BROWN	1	WS750/WS730
	AH64-02225C		PMMA BROWN	1	ZS750/ZS730
6	AH64-02220B	DECO-DOOR.CASS L	ABS L/GRAY	1	silver
	AH64-02220C		ABS L/GRAY	1	auto reverse(silver)
	AH64-02220D		ABS L/GRAY	1	gray
	AH64-02220E		ABS L/GRAY	1	auto reverse(gray)
7	AH64-02221B	DECO-DOOR.CASS R	ABS L/GRAY	1	silver
	AH64-02221C		ABS L/GRAY	1	gray
8	AH64-02217B	DOOR-CASS.L	ABS L/GRAY	1	gray
	AH64-02217C		ABS L/GRAY	1	silver
9	AH64-02218B	DOOR-CASS.R	ABS L/GRAY	1	gray
	AH64-02218C		ABS L/GRAY	1	silver
10	AH67-00196B	LENS-JOG	PMMA BLUE	1	
11	AH63-00544A	SHEET-JOG	3M	1	
12	AH64-02234B	KNOB-JOG	ABS L/GRAY	1	gray
13	AH64-02224B	DECO-JOG	ABS L/GRAY	1	
14	AH64-02222B	DECO-FUNCTION	ABS L/GRAY	1	mp3
	AH64-02222C		ABS L/GRAY	1	
15	AH64-02223B	DECO-FRONT	ABS L/GRAY	1	RDS(silver)
	AH64-02223C		ABS L/GRAY	1	NO RDS(silver)
	AH64-02223D		ABS L/GRAY	1	RDS(gray)
	AH64-02223E		ABS L/GRAY	1	NO RDS(gray)
16	AH64-02279B	KNOB-MIC	ABS L/GRAY	1	silver
17	AH61-00552A	SPRING-EJECT L	SUS PI 1.1	1	
18	AH64-02231B	KNOB-VOLUME	ABS L/GRAY	1	
19	AH67-00193B	LENS-VOLUME	PMMA GLUE	1	
20	AH64-02232B	KNOB-SUBWOOFER	ABS L/GRAY	2	silver
21	AH67-00194B	LENS-SUBWOOFER	PMMA BLUE	2	

No.	Code No.	Description	Specification	Q'ty	REMARK
22	AH61-00553A	SPRING-EJECT R	SUS PI 1.1	1	
23	AH61-80030A	DAMPER-ASSY	POM M0.8 G130	2	
24	AH95-50001A	ASSY-LATCH	ASSY	2	
25	AH64-02230B	KNOB-DEMO	ABS L/GRAY	1	silver
	AH64-02230C		ABS L/GRAY	1	gray
26	AH67-00190B	LENS-P.SOUND	PMMA RED	1	ZS750/ZS730
27	AH61-01253A	HOLDER-P.SOUND	ABS WHITE	1	
28	AH64-02226B	KNOB-OPEN	ABS L/GRAY	1	silver
29	AH61-01254A	HOLDER-FUNCTION	ABS WHITE	1	
30	AH63-00505A	FILTER-FUNCTION	PC 0.16T MILKY	1	
31	AH67-00191B	LENS-FUNCTION	PMMA BLUE	1	
32	AH67-00192A	LENS-POWER	PMMA MILKY	1	
33	AH64-02228B	KNOB-POWER	ABS L/GRAY	1	silver
34	AH64-02229B	KNOB-ECHO	ABS L/GRAY	1	silver
35	AH64-02227B	KNOB-TIMER	ABS L/GRAY	1	silver
36	AH64-00900A	CABINET-SIDE.L	MIPS L/GRAY	1	silver
	AH64-00900B		MIPS D/GRAY	1	gray
37	AH64-30443F	CABINET-TOP	MIPS L/GRAY	1	silver
	AH64-30443G		MIPS D/GRAY	1	gray
38	AH61-40014A	SUPPORT-RIVET	NYLON 66 BLK	1	
39	AH61-00021B	SUPPORT-PCB	ABS BLK	1	
40	AH63-000278E	COVER-PCB	PC	1	
41	AH61-40014A	SUPPORT-RIVET	NYLON 66 BLK	1	
42	AH61-00685A	BRKT-PCB	SECC 0.8T	1	
43	6501-001391	CABLE-TYE	NYLON 66	1	
44	AH62-00078A	HEAT-SINK TR	AL EXTR	1	
45	AH64-01036B	COVER-REAR	ABS L/GRY	1	
46	AH64-01721C	CABINET-REAR	HIPS L/GRAY	1	RDS
	AH64-01721D		HIPS L/GRAY	1	NO RDS
47	AH62-00080B	HEAT-SINK.M	AL EXTR	1	ZS750
	AH62-00080C		AL EXTR	1	ZS730
48	AH61-00973A	BRKT-H/SINK L	SECC 1.0T	1	
49	AH61-00977A	BRKT-H/SINK R	SECC 1.0T	1	
50	AH64-30416E	CABINET-BOTTOM	SECC 1.0T	1	
51	AH61-00413B	BRKT-DECK	SPTE 0.3T	1	
52	AH64-00901A	CABINET-SIDE.R	MIPS L/GRAY	1	silver
	AH64-00901B		MIPS D/GRAY	1	gray
53	AH61-00521A	HOLDER-VFD	ABS BLK	1	

2-3 CD Deck Exploded View and Parts list

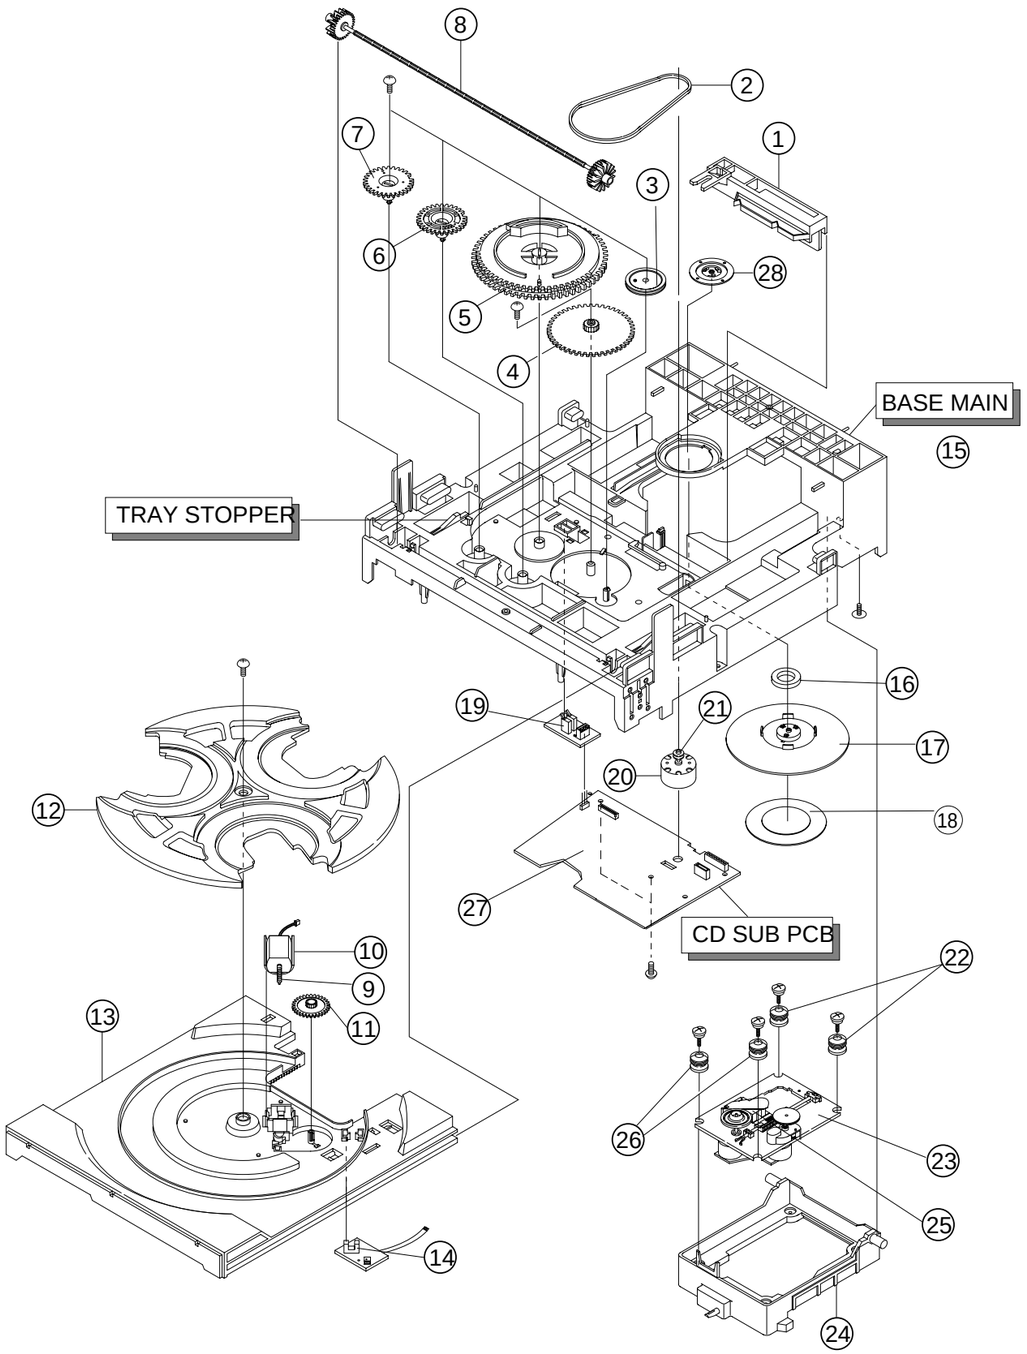

No.	Code No.	Description	Specification	Remarks
	AH97-00162A	ASS'Y-CD-MECHA	CMS300-V	
1	AH66-80022A	SLIDER-CAM	ABS HF-380 NTR	
2	AH66-60034A	BELT-LOAD	CR	
3	AH66-20186A	GEAR-PULLEY	POM (M90-44) WHT	
4	AH66-20187A	GEAR-LOAD	POM (M90-44) BLK	
5	AH66-20188B	GEAR-CAM	POM (M90-44) WHT	
6	AH66-20189B	GEAR-TRAY	POM (M90-44) BLK	
7	AH66-20190B	GEAR-CONVERT	POM (M90-44) WHT	
8	AH66-20191A	GEAR-SYNCRO	ABS HF-380 NTR	
9	AH66-20192A	GEAR-WORM	POM(M90-44),M0.5,PCD4.5	
10	AH31-12001A	MOTOR-LOADING	FF-030PN-09120	
11	AH66-20193A	GEAR-ROULLETE	POM(M90-44) BLK	
12	AH63-00324A	TRAY-ROULLETE	ABS XR-401 BLK	
13	AH63-00325A	TRAY-DISC	ABS BLK	
14	AH32-10001F	SENSOR	KPI-L06	
15	AH61-00837A	BASE-MAIN	ABS,NATURAL,CMS-300	
16	3302-000159	MAGNET	AC,3500-3800G,2.6-3.2MGOe,30	
17	AH63-90053A	TABLE-CHUCK	,ABS,+GF20%,BLK,	
18	AH63-00068B	SHEET-CHUCK	SHEET,HYMERON,BLK,0.4T	
19	3405-000101	SWITCH -MICRO	MLS-24	
20	AH31-10021A	MOTOR-DC	RF-500TB,9VDC/130MA	
21	AH66-10008A	PULLEY-MOTOR	POM,BLK,CMS-CR3	
22	AH73-10031A	RUBBER-CD(R)	SI,CMS-300,40,RED	
23	AH91-60150C	CDP DECK ASSY	CMS-D73SG6U	
24	AH66-30098A	LEVER-LIFTER	ABS BLK CMS-300	
25	AH30-00007A	PICK-UP	SOH-AD3	
26	AH73-10034A	RUBBER-CD(G)	SI,CMS-300,40,GREEN	
27	AH92-00922A	ASS'Y PCB CD MAIN		
28	AH61-00225A	BRKT-CHUCK	SECL 0.8t	

2-4 SPEAKER Exploded View and Parts list

2-4-1 MAX-WS730/ WS730S/ ZS730/ ZS730G

* CAUSION : It is used the bonding, connet NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to demage the SPEAKER.

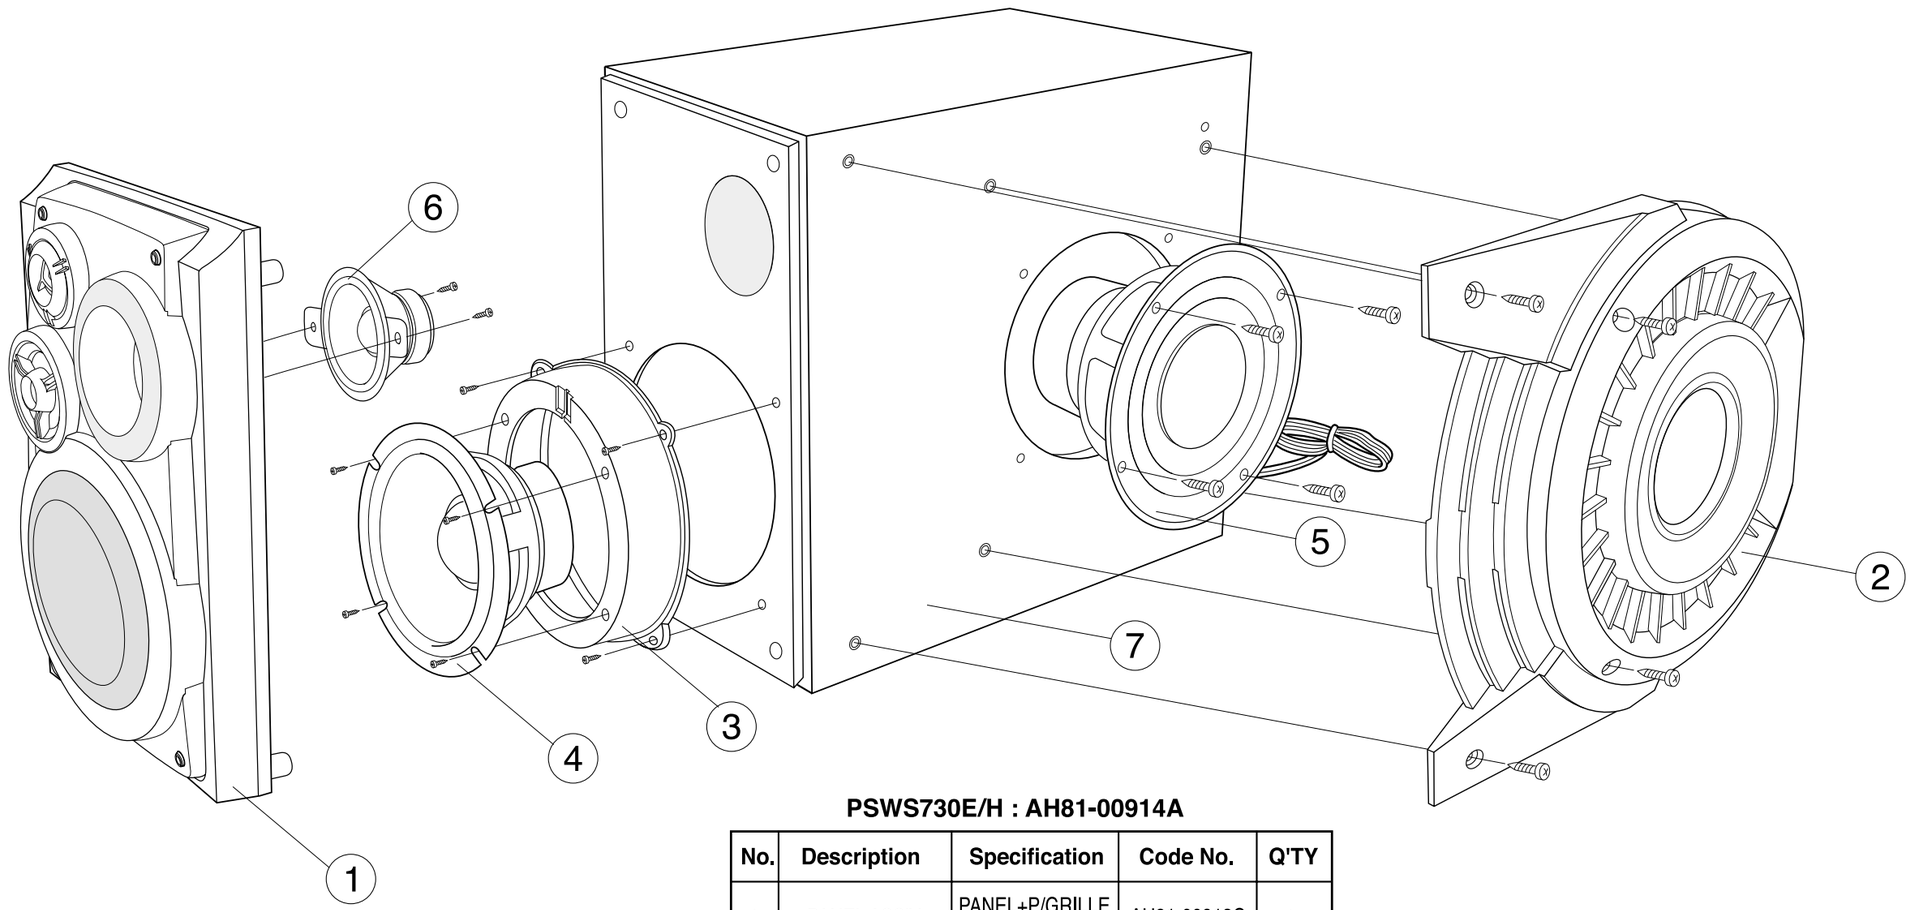

PSWS730E/H : AH81-00914A

No.	Description	Specification	Code No.	Q'TY
1	PANEL ASS'Y	PANEL+P/GRILLE +PIEZO+DUCT	AH81-00913C	1
2	SIDE PANEL	HIPS L/GRAY	AH81-00913E	1
3	WOOFER RING	HIPS BLK	AH81-00913F	1
4	UNIT WOOFER	5 1/4"	AH81-00914C	1
5	UNIT SUBWOOFER	6 1/4"	AH81-00914D	1
6	UNIT TWEETER	2 1/4"	AH81-00914E	1
7	CABINET ASS'Y	PB 9t, 12t	AH81-00914A	1

* CAUSION : It is used the bonding, connet NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to demage the SPEAKER.

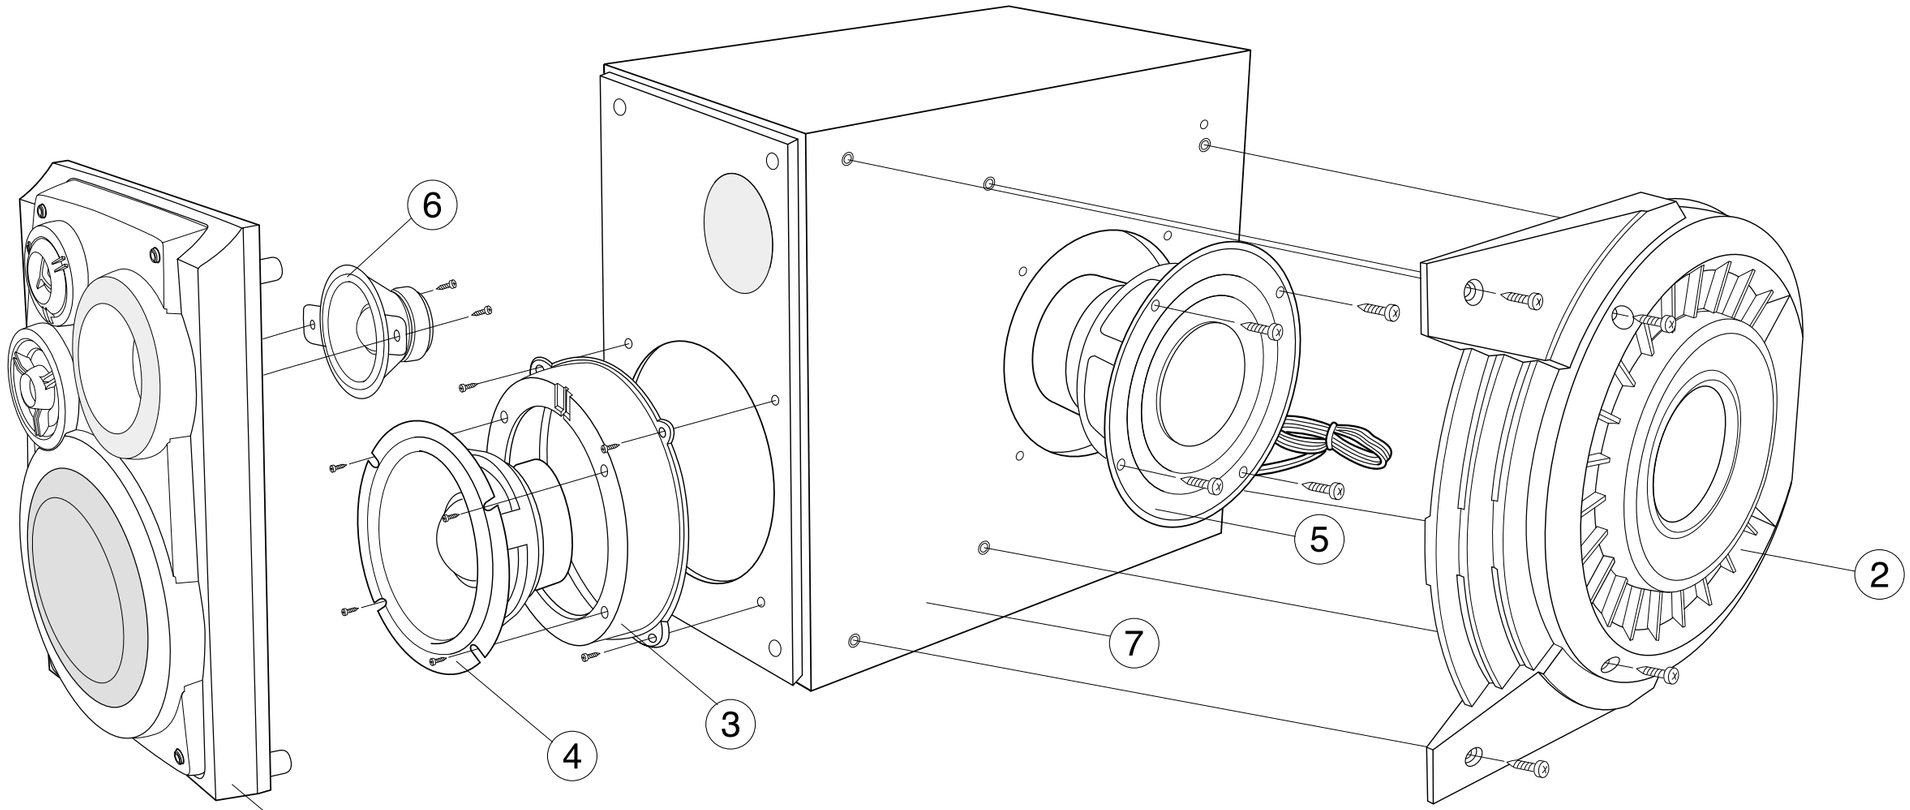

PSWS750E/H : AH81-00913A

No.	Description	Specification	Code No.	Q'TY
1	PANEL ASS'Y	PANEL+P/GRILLE +PIEZO+DUCT	AH81-00913C	1
2	SIDE PANEL	HIPS L/GRAY	AH81-00913E	1
3	WOOFER RING	HIPS BLK	AH81-00913F	1
4	UNIT WOOFER	$5\frac{1}{4}$"	AH81-00913H	1
5	UNIT SUBWOOFER	8"	AH81-00913J	1
6	UNIT TWEETER	$2\frac{1}{4}$"	AH81-00913K	1
7	CABINET ASS'Y	PB 9t, 12t	AH81-00913M	1